
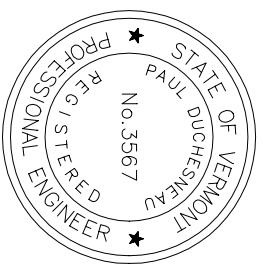


NOTES: ABOVE GROUND APPLICATION

1. THE TOTAL COMBINED HEIGHT OF SOUND FOOTINGS™ FOOTING FORM MUST NOT EXCEED FIVE FEET (5').
2. DRILL 3/8" HOLE AT A 45° ANGLE AT TWELVE LOCATIONS. (SEE PATTERN BELOW)
3. DRIVE A 12" SPIKE THROUGH 3/8" HOLE AT A 45° ANGLE INWARDS.
4. TUBES MUST BE BRACED ONCE THE COMBINED HEIGHT EXCEEDS THREE FEET (3') ABOVE GROUND.
5. SCAB BOARDS ARE FASTENED TO THE CONSTRUCTION TUBE WITH 1-1/4" WOOD SCREWS FROM THE INSIDE OF THE TUBE.
6. SOUND FOOTINGS™ FOOTING FORM MUST BE PLACED ON UNDISTURBED GROUND.
7. CHECK ALIGNMENT OF CONSTRUCTION TUBE BEFORE POURING CONCRETE.

12" SPIKE LOCATIONS, TYP.

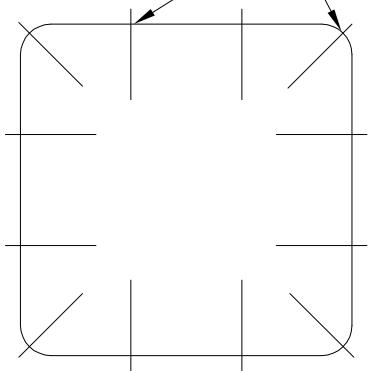

**SOUND FOOTINGS™ FOOTING FORM**

TITLE  
ABOVE GROUND APPLICATION

SIZE	SF-22	DWG. NO.	SF-101	REV.
SCALE	1" = 1'	DATE	9/24/01	SHEET 1 of 9