
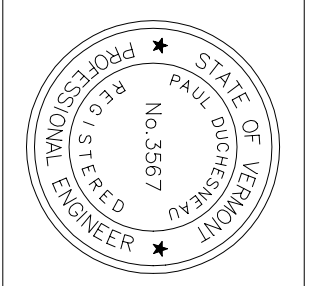


NOTES: ABOVE GROUND APPLICATION

1. THE TOTAL COMBINED HEIGHT OF SOUND FOOTINGS™ FOOTING FORM MUST NOT EXCEED FIVE FEET (5').
2. DRILL 3/8" HOLE AT A 45° ANGLE AT TWELVE LOCATIONS. (SEE PATTERN BELOW)
3. DRIVE A 12" SPIKE THROUGH 3/8" HOLE AT A 45° ANGLE INWARDS.
4. TUBES MUST BE BRACED ONCE THE COMBINED HEIGHT EXCEEDS THREE FEET (3') ABOVE GROUND.
5. SCAB BOARDS ARE FASTENED TO THE CONSTRUCTION TUBE WITH 1-1/4" WOOD SCREWS FROM THE INSIDE OF THE TUBE.
6. SOUND FOOTINGS™ FOOTING FORM MUST BE PLACED ON UNDISTURBED GROUND.
7. CHECK ALIGNMENT OF CONSTRUCTION TUBE BEFORE POURING CONCRETE.

12" SPIKE LOCATIONS, TYP.

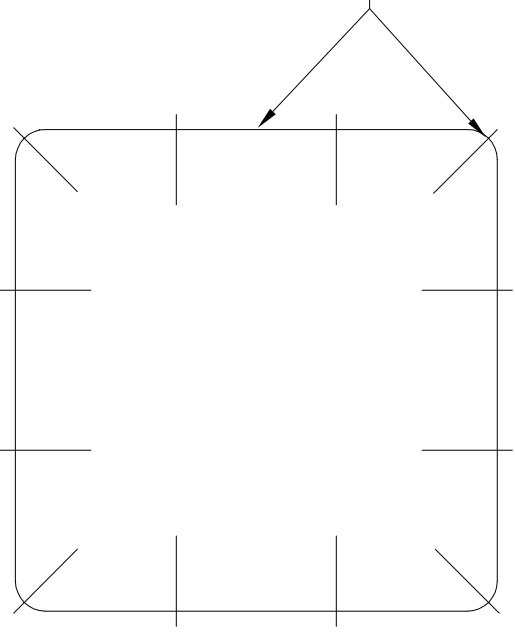

<b>SOUND FOOTINGS™ FOOTING FORM</b>			
TITLE			
ABOVE GROUND APPLICATION			
SIZE	DWG. NO.	REV.	
SF-32	SF-107		
SCALE	DATE	SHEET	
1" = 1'	9/24/01	7 of 9	