
## NOTES:

- 1. ALL WORK MUST CONFORM WITH THE CURRENT INTERNATIONAL BUILDING CODE (IBC).
- 2. ALL CONTRACTORS MUST VERIFY THE CONDITIONS AND DIMENSIONS AT THE SITE BEFORE STARTING WORK. INFORM ENGINEER OF ANY DISCREPANCIES IMMEDIATELY.
- 3. TEMPORARY SUPPORTS ARE NOT INDICATED ON THESE DRAWINGS AND ARE THE RESPONSIBILITY OF THE CONTRACTOR PERFORMING THE WORK. HE SHALL ENGAGE AN ENGINEER FOR THIS PURPOSE, AS APPLICABLE.



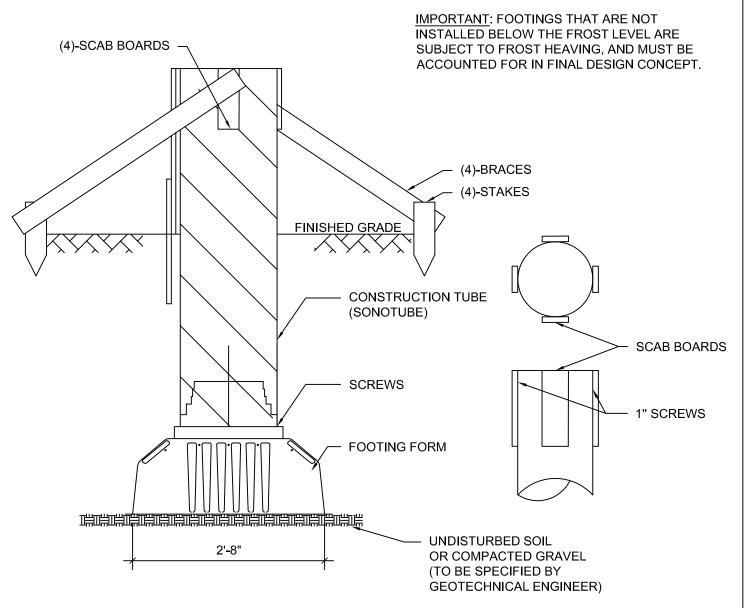

S900 / 3/4" = 1'-0"



SOUND FOOTINGS FOOTING DETAIL

SOUND FOOTINGS, LLC

DATE: 03/29/2019

DWO NUMBER

DWG NUMBER: S900

